

TABLE OF CONTENTS

Section		Page
I	GENERAL DESCRIPTION	1-1
	1.1 Purpose of Instruction Book	1-1
	1.2 Purpose of Equipment	1-1
	1.3 Description of Equipment	1-1
	1.3.1 Physical Description	1-1
	1.3.2 Electrical Description	1-1
	1.4 Equipment Supplied	1-2
	1.5 Equipment Required but not Supplied	1-2
	1.6 Accessory Equipment	1-2
	1.7 Equipment Specifications	1-3
	1.7.1 Mechanical	1-3
	1.7.2 Electrical	1-3
	1.8 Tube Complement	1-4
II	INSTALLATION	2-1
	2.1 Unpacking	2-1
	2.2 Transmitter Location	2-1
	2.3 Replacement of Units Removed for Shipping	2-1
	2.4 External Connections	2-5
	2.5 Final Installation Procedure	2-5
	2.6 Interunit Cabling Diagram	2-5
	2.7 Remote Control Connections	2-6
	2.8 Frequency Change	2-8
III	OPERATION	3-1
	3.1 Control Functions	3-1
	3.2 Starting the Transmitter in a New Installation	3-2
	3.3 Starting the Transmitter in Normal Operation	3-3
IV	PRINCIPLES OF OPERATION	4-1
	4.1 General	4-1
	4.2 Control Circuits	4-1
	4.3 Arc-Suppression Circuit	4-3
V	MAINTENANCE	5-1
	5.1 General	5-1
	5.2 Preventive Maintenance	5-1
	5.2.1 Cleaning	5-1
	5.2.2 Inspection	5-1
	5.2.3 Lubrication	5-1
	5.3 Tube Maintenance	5-1
	5.4 Trouble Shooting	5-1
	5.5 Ordering Replacement Parts	5-2
VI	PARTS LIST	6-1
VII	ILLUSTRATIONS	7-1

LIST OF ILLUSTRATIONS

Figure		Page
1-1	AM Broadcast Transmitter 20V-3 (C751-03-P)	1-0
1-2	AM Broadcast Transmitter 20V-3, Rear View with Lower Panel Removed (C751-04-P)	1-2
2-1	AM Broadcast Transmitter 20V-3, Installation Diagram (C751-02-5)	2-2
2-2	Interunit Cabling Diagram (C751-22-6)	2-3
2-3	Transformer Details (C751-14-3)	2-6
2-4	Cabling Example (C751-20-2)	2-6
2-5	T101 and T102 Internal Connections (C751-21-4)	2-7
3-1	Operating Control Locations (C751-12-P)	3-0
3-2	Relay Compartment (C751-06-P)	3-2
4-1	AM Broadcast Transmitter 20V-3, Block Diagram (C751-13-3)	4-2
4-2	Control Circuits, Simplified Schematic Diagram (C751-19-4)	4-2
6-1	AM Broadcast Transmitter 20V-3, Front View (C751-18-P)	6-8
6-2	AM Broadcast Transmitter 20V-3, Rear View (C751-05-P)	6-9
6-3	Relay Compartment (C751-11-P)	6-10
6-4	R-F Output Network Compartment (C751-09-P)	6-11
6-5	R-F Chassis, Outside View (C751-10-P)	6-12
6-6	R-F Chassis, Inside View (C751-07-P)	6-13
6-7	Audio Chassis, Outside View (C751-17-P)	6-14
6-8	Audio Chassis, Inside View (C751-08-P)	6-15
6-9	Power Supply Chassis, Top Rear View (C751-15-P)	6-16
6-10	Power Supply Chassis, Bottom View (C751-16-P)	6-16
7-1	AM Broadcast Transmitter 20V-3, Schematic Diagram (C751-01-6)	7-1

LIST OF TABLES

Table		Page
1-1	Equipment Supplied	1-2
1-2	Equipment Required but not Supplied	1-2
1-3	Accessory Equipment	1-2
1-4	Tube Complement	1-4
2-1	Remote Control Connections	2-6
2-2	Crystal Part Numbers	2-8
2-3	R-F Output Network Components	2-9
5-1	Typical Meter Indications	5-2