

TABLE OF CONTENTS

SECTION 1 - GENERAL DESCRIPTION

	Page No.
1.1. General	1-1
1.2. Mechanical Description.	1-1
1.2.1. General	1-1
1.2.2. Control System.	1-2
1.2.3. Ventilation	1-2
1.3. Electrical Description.	1-2
1.3.1. General	1-2
1.3.2. Power Supplies.	1-2
1.3.3. Audio Circuits.	1-3
1.3.4. RF Circuits	1-3
1.4. Specifications.	1-3

SECTION 2 - INSTALLATION

2.1. Installation.	2-1
2.1.1. Preliminary	2-1
(a) Unpacking.	2-1
(b) Location of Transmitter.	2-1
(c) Replacement of Units Removed for Shipping.	2-1
(d) Internal Connections	2-3
(e) External Connections	2-3
(f) Tubes and Crystals	2-4

SECTION 3 - ADJUSTMENT AND OPERATION

3.1. Initial Adjustment.	3-1
3.1.1. Location of Controls.	3-1
3.1.2. Function of Controls.	3-1
(a) Circuit Breakers and Switches.	3-1
(b) Adjustment Controls.	3-2
3.1.3. Energizing the Equipment for the First Time	3-2
(a) Precautions.	3-2
(b) Power Circuit Check.	3-3
3.1.4. Mercury Vapor Rectifier Tubes	3-4
3.1.5. Tuning Adjustment	3-4
(a) Alignment of rf Section.	3-4
(b) Power Amplifier Plate Tuning and Loading	3-6
(c) Audio Adjustments.	3-7
3.2. Routine Operation	3-7
3.2.1. General	3-8
3.2.2. Starting the Equipment.	3-8
3.2.3. Power Change.	3-8

TABLE OF CONTENTS (Cont.)

SECTION 4 - CIRCUIT DESCRIPTION

	Page No.
4.1. Electrical Description	4-1
4.1.1. Primary Power Circuits	4-1
(a) Filament, Blower, Bias, and Control Circuits.	4-1
(b) High and Low Voltage Circuits	4-3
4.1.2. RF Section	4-3
(a) Oscillator.	4-3
(b) Buffer Amplifier.	4-3
(c) RF Driver Amplifier	4-4
(d) Power Amplifier	4-4
4.1.3. Audio Circuits	4-4
(a) First Audio Amplifier and Audio Driver.	4-4
(b) Modulator	4-4
4.1.4. Filament Supplies.	4-4
4.1.5. Plate and Bias Supplies.	4-4
(a) High Voltage Supply	5-1
(b) Low Voltage Supply.	5-1
(c) Bias Voltage Supply	5-1

SECTION 5 - MAINTENANCE

5.1. Cleaning	5-1
5.1.1. General.	5-1
5.2. Air Filter	5-2
5.3. Lubrication.	5-2
5.4. Routine Checks	5-2
5.4.1. Tube Check	5-2
5.4.2. Mechanical Inspection.	5-3
5.5. Trouble Shooting	5-3
5.5.1. Tube Failure	5-3
5.5.2. Location of Trouble.	5-3
5.5.3. Servicing the Equipment.	5-3

SECTION 6 - PARTS LIST

SECTION 7 - ILLUSTRATIONS

LIST OF ILLUSTRATIONS

<u>Figure</u>	<u>Title</u>
1-1	Collins 20V 1000 Watt AM Transmitter
1-2	Collins 20V Transmitter Rear View
2-1	Typical Installation Diagram, 20V Transmitter
3-1	Location of controls behind inspection plates
7-1	20V Main Schematic Diagram
7-2	20V Primary Control Circuit Diagram
7-3	20V Channel Wiring Diagram
7-4	20V Inter-unit Cabling Diagram
7-5	Low Voltage Power Shelf Parts Arrangement, Top View
7-6	Low Voltage Power Shelf Parts Arrangement, Bottom View
7-7	Low Voltage Power Shelf Parts Arrangement, Rear View
7-8	Output Network, Parts Arrangement, Bottom View
7-9	Audio Chassis Parts Arrangement, Top View
7-10	Audio Chassis Parts Arrangement, Bottom View
7-11	Audio Chassis Parts Arrangement, Side View
7-12	RF Chassis Parts Arrangement, Top View
7-13	RF Chassis Parts Arrangement, Bottom View
7-14	20V Transmitter Parts Arrangement, Front View
7-15	20V Transmitter Parts Arrangement, Rear View
7-16	Transformer Details

LIST OF TABLES

<u>Table</u>	<u>Title</u>
2-1	List of Wire Sizes and Types
3-1	Typical Meter Readings
4-1	20V Output Tank Tuning Data
4-2	20V Output Tank Components for 50 or 72 ohm Resistive Load
4-3	T-102 and T-103 Internal Connections
5-1	Typical Operating Characteristics