

## **table of contents**

	<i>Page</i>
<b><i>Section 1 Installation</i></b> .....	1-1
1.1 Unpacking .....	1-1
1.2 Mounting and Cabling .....	1-1
<b><i>Section 2 Operation</i></b> .....	2-1
2.1 General .....	2-1
2.2 Control .....	2-1
2.3 Operating .....	2-2
<b><i>Section 3 Circuit Description</i></b> .....	3-1
3.1 General .....	3-1
3.2 High-Voltage Circuit .....	3-1
3.2.1 High-Voltage Regulation .....	3-1
3.3 Low-Voltage Circuit .....	3-1
3.4 Bias Voltage Circuit .....	3-1
3.5 Power Input/Output .....	3-1
<b><i>Section 4 Maintenance</i></b> .....	4-1
4.1 General .....	4-1
4.2 Cabinet Removal .....	4-1
<b><i>Section 5 Specifications</i></b> .....	5-1
5.1 Specifications .....	5-1
<b><i>Section 6 Parts List</i></b> .....	6-1
6.1 Introduction .....	6-1
6.2 Group Assembly Parts List .....	6-5
6.3 Numerical Index .....	6-11
6.4 Reference Designation Index .....	6-12
<b><i>Section 7 Illustrations</i></b> .....	7-1

## **list of illustrations**

<i>Figure</i>		<i>Page</i>
1-1	516F-2 AC Power Supply, Placement in 30S-1 Linear Power Amplifier .....	1-2
1-2	516F-2 AC Power Supply, Power Transformer Connections ....	1-3
2-1	516F-2 AC Power Supply, Bias Adjustment .....	2-1
6-1	516F-2 AC Power Supply .....	6-5
7-1	516F-2 AC Power Supply, Schematic Diagram .....	7-3

## **list of tables**

<i>Table</i>		<i>Page</i>
1-1	Equipment Furnished With 516F-2 .....	1-1